
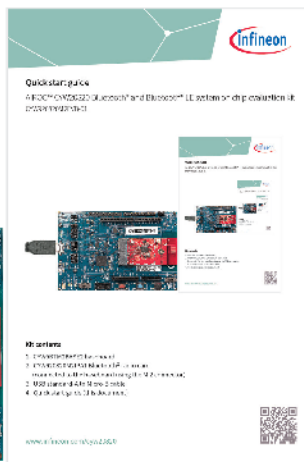


Quick start guide

AIROC™ CYW20820 Bluetooth® and Bluetooth® LE system on chip evaluation kit
CYW920820M2EVB-01

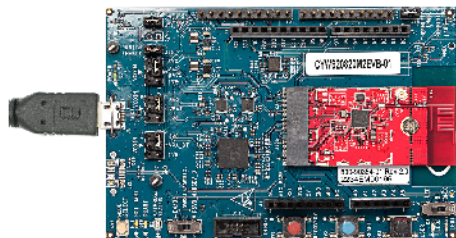

Kit contents

1. CYW920820M2EVB-01 baseboard
2. CYW920820M2IPA1 Bluetooth® radio card
(connected to the baseboard using the M.2 connector)
3. USB standard-A to Micro-B cable
4. Quick start guide (this document)



Before you start

1. Download and install ModusToolbox™ software v2.4 (or later) with the Bluetooth® SDK at <https://www.infineon.com/modustoolbox>.
2. Scan the QR code to download and install the LightBlue App.
3. Connect a USB cable between the PC and CYW920820M2EVB-01 (J6) to power the kit.

Download the code example

1. In Eclipse IDE for ModusToolbox™, select **File > New > ModusToolbox™ application**. This launches the Project Creator.
2. In the Project Creator, click **AIROC™ Bluetooth® BSPs**.
3. Select the 'CYW920820M2EVB-01' kit and click **Next**.
4. Select the 'LE Find Me' code example, and then click **Create**.


Note: The kit is pre-programmed with the 'LE Find Me' code example so you do not need to program the kit to try it.

For more information, see the ModusToolbox™ software user guide at <https://www.infineon.com/modustoolbox>.

Download the LightBlue app




Selecting the code example in Eclipse IDE for ModusToolbox™

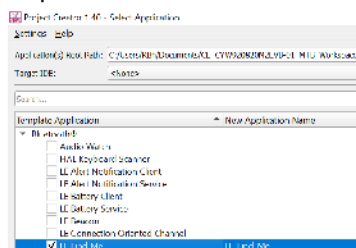

Run the LightBlue mobile application

1. Turn ON Bluetooth® on your Android or iOS device.
2. Launch the LightBlue mobile app.
3. Press the reset switch on the board to start sending advertisements.
4. Swipe down on the LightBlue app home screen to start scanning for LE Peripheral devices.
5. Your device ("Find me Target") appears on the home screen. Tap **Connect** to establish a Bluetooth® LE connection with the device.
6. Observe the changes in the yellow LED (LED1) before and after establishing the connection.
7. Select the 'Alert Level' service and provide the alert value '0' for No Alert, '1' for Mid Alert, and any other value for High Alert.
8. Observe that the state of the red LED (LED2) changes based on the alert level.


LightBlue app on Android

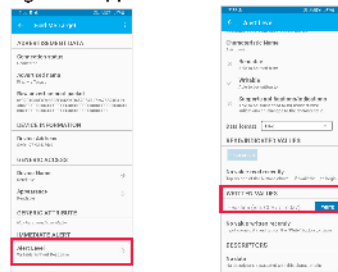


LightBlue app on iOS



AIROC™ CYW920820M2EVB-01 evaluation kit details

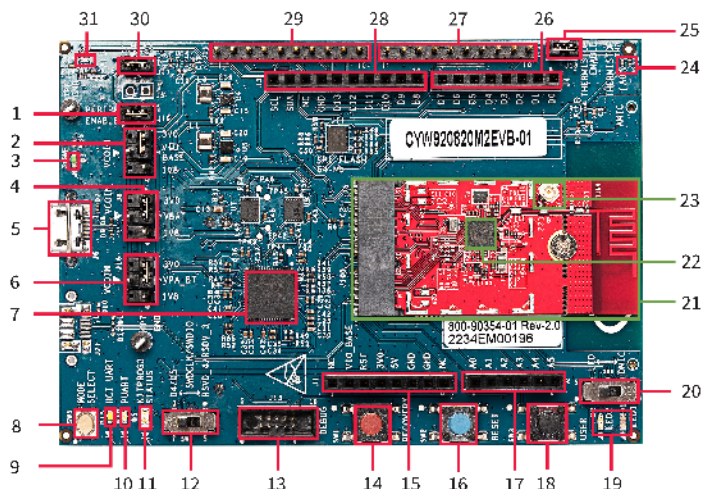

- | | |
|--|---|
| 1. Peripheral enable jumper (J19) | 19. User LEDs (LED1, LED2) |
| 2. VDDIO select jumper (J7) | 20. User LED/DMIC switch (SW4) |
| 3. Baseboard power status LED (D3) | 21. CYW920820M2IPA1 Bluetooth® M.2 radio card |
| 4. VBAT select jumper (J8) | 22. AIROC™ CYW20820 Bluetooth® and Bluetooth® LE system on chip (CYW920820M2IPA1.U1A) |
| 5. USB connector for programming/USB-UART (J6) | 23. External antenna connector (CYW920820M2IPA1.J1) |
| 6. VPA select jumper (J16) | 24. Thermistor (TH2) |
| 7. KitProg3 based on PSoC™ 5LP MCU (U12) | 25. Thermistor enable jumper (J18) |
| 8. KitProg3 mode select (SW5) | 26. Header compatible with Arduino (J4) |
| 9. HCI UART status LED (D15) | 27. Bluetooth® I/O header (J12) |
| 10. PUART status LED (D16) | 28. Header compatible with Arduino (J3) |
| 11. KitProg3 status LED (D5) | 29. Bluetooth® I/O header (J11) |
| 12. Debug interface select jumper (SW8) | 30. VDDIO current measurement jumper (J17) |
| 13. Debug header (J13) | 31. Ambient light sensor (U10) |
| 14. Recovery button (SW1) | |
| 15. Header compatible with Arduino (J1) | |
| 16. Reset button (SW2) | |
| 17. Header compatible with Arduino (J2) | |
| 18. User button (SW3) | |

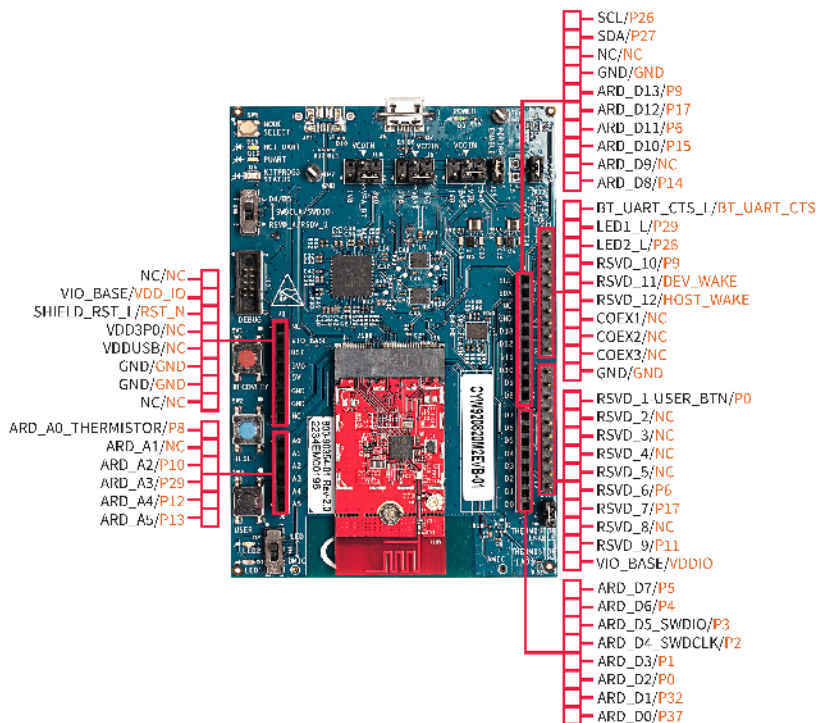

Legend ■ Baseboard I/Os ■ CYW20820 I/Os

www.infineon.com

Published by
Infineon Technologies AG
81726 Munich, Germany

© 2022 Infineon Technologies AG.
All Rights Reserved.

Phase model
This document is a formalization of procedures and information on how to handle information regarding the components, materials or processes for any functionality, condition or other quality of our products or services. They are important to us because they help us to find out which specific cells in our products, materials or processes refer to the relevant product data sheets or procedures by which they are tested and the technical department we require to handle the stability of our products and the stability of our cells.

The personal copyright in a hospital's permanent medical information system expires at the time of death.

Additional Information
For 1, turn information on fact sheets, our products, the application of our products, delivery terms and conditions and prices, please contact us, nearest Intel® Near Technology office www.intel.com.

Warnings:
Due to technical requirements, our products may contain various substances. For information on the types in question, please contact your local branch or our Technical Service.

Direct use revenues are widely appreciated by users as a "win-win" arrangement, since they reflect and recompense the value of the information that is produced. They may also be used to carry the additional costs of applied use, including but not limited to medical research. However, it is difficult to apply them to applied use where a failure of the product or any consequences of the use thereof are not in question (e.g., drugs).